

## **K-BUS® 6 Buttons Touch panel\_V2.1**



**CHTB-06/01.2.10 (Classic, white)**

**CHTB-06/01.2.11 (Classic, black)**

**CHTB-06/01.2.21 (slim, black)**

**CHTB-06/01.2.22 (slim, silver )**

**CHTB-06/01.2.24 (slim, gold)**

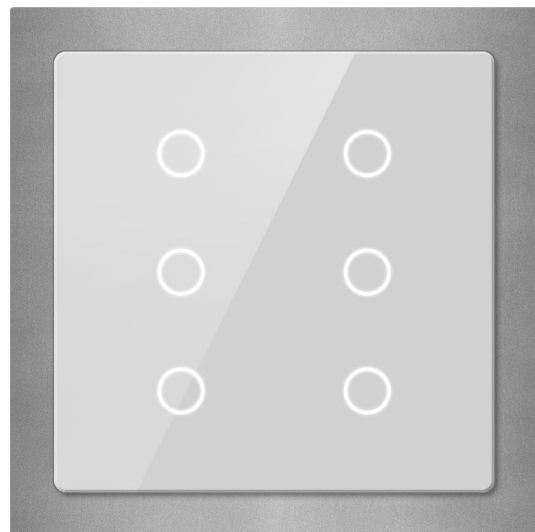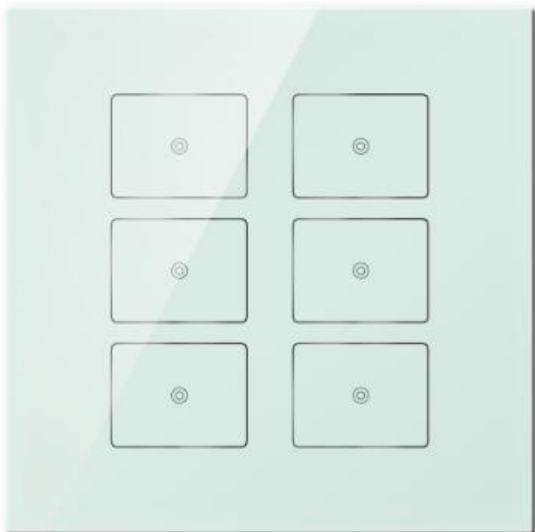

**KNX/EIB Home and Building Control System**

# Attentions

1. Please keep devices away from strong magnetic field, high temperature, wet environment;



2. Do not fall the device to the ground or make them get hard impact;



3. Do not use wet cloth or volatile reagent to wipe the device;



4. Do not disassemble the devices.

# Contents

Chapter 1 Summary	1
Chapter 2 Technical data	2
Chapter 3 Structure and dimension diagram	3
3.1 Dimension diagram	3
3.2 Structure	5
Chapter 4 Project design and programming	6
4.1 Overview of the functions	6
Chapter 5 Parameter setting description in the ETS	7
5.1 Parameter window “General”	7
5.2 Independent working mode	8
5.2.1 “Switching” function	8
5.2.2 “Dimming” function	9
5.2.3 “Blind” function	11
5.2.4 “Value sender” function	14
5.2.5 “Scene” function	15
5.3 Linked working mode	17
5.3.1 “Switching” function	17
5.3.2 “Dimming” function	18
5.3.3 “Blind” function	21
5.3.4 “Value sender” function	23
5.3.5 “Scene” function	24
5.4 Parameter window “LED function”	26

## Chapter 1 Summary

The Touch panel is used in building control systems, which can be mounted on a flush-mounted bus coupler. At the same time, the application module can be also connected with other devices for a system on the bus, and the functions are both simple to operation and intuitive. Users can program it according to the requirement to implement the function systematically.

This manual provides detailed technical information about the switch sensor for users as well as assembly and programming details, and explains how to use the Touch panel by the application examples.

The Touch panel can be used to control the switch, dimming, blinds, and scene, etc. Each button of the Touch panel correspond one LED with two colors indication. The device can be installed in a conventional 86 mm wiring box.

The bus coupler that connected the Touch panel connects to the bus though the KNX connection terminals and has no use for additional supply voltage. It is available to assign the physical address and set the parameters by Engineering design tools ETS with VD3/VD4 (higher than edition ETS3).

The Touch panel can be used in a wide variety of application areas. The following list provides an overview:

- ◆ **Switching and dimming**
- ◆ **Control of blinds and shutters**
- ◆ **Sending of values, e.g. water line brightness.**
- ◆ **Recall and storage scene**
- ◆ **LED indication**


Each button of a device can adopt any of the functions described above, and is independent of each other. In addition, left button of touch panel can also be used in association with right button, depend on parameter settings.

## Chapter 2 Technical data




<b>Power supply</b>	Operation voltage	21-30V DC, via the KNX bus
	Current consumption, bus	<12mA
	Power consumption, bus	<360mW
<b>Operating and display</b>	Corresponding 1 LED indication for each button	The LEDs have two colors, it is blue and yellow
	Programming LED and button	For assignment of the physical address
<b>Connections</b>	KNX	Via bus connection terminal
<b>Temperature</b>	Operation	- 5 °C ... 45 °C
	Storage	- 25 °C ... 55 °C
	Transport	- 25 °C ... 70 °C
<b>Design</b>	Embedded installation of equipment	
	Dimensions	86×86×32mm (application module) 50.7×45.46×23.1mm (coupler)
<b>Installation</b>	In a conventional 86 mm wiring box	
<b>Weight</b>	0.15KG	
<b>Housing/color</b>	Plastic + glass housing, white/black	
	Note: The slim panel is metal frame ( golden, silver, black) and glass touch.	

## Chapter 3 Structure and dimension diagram

### 3.1 Dimension diagram

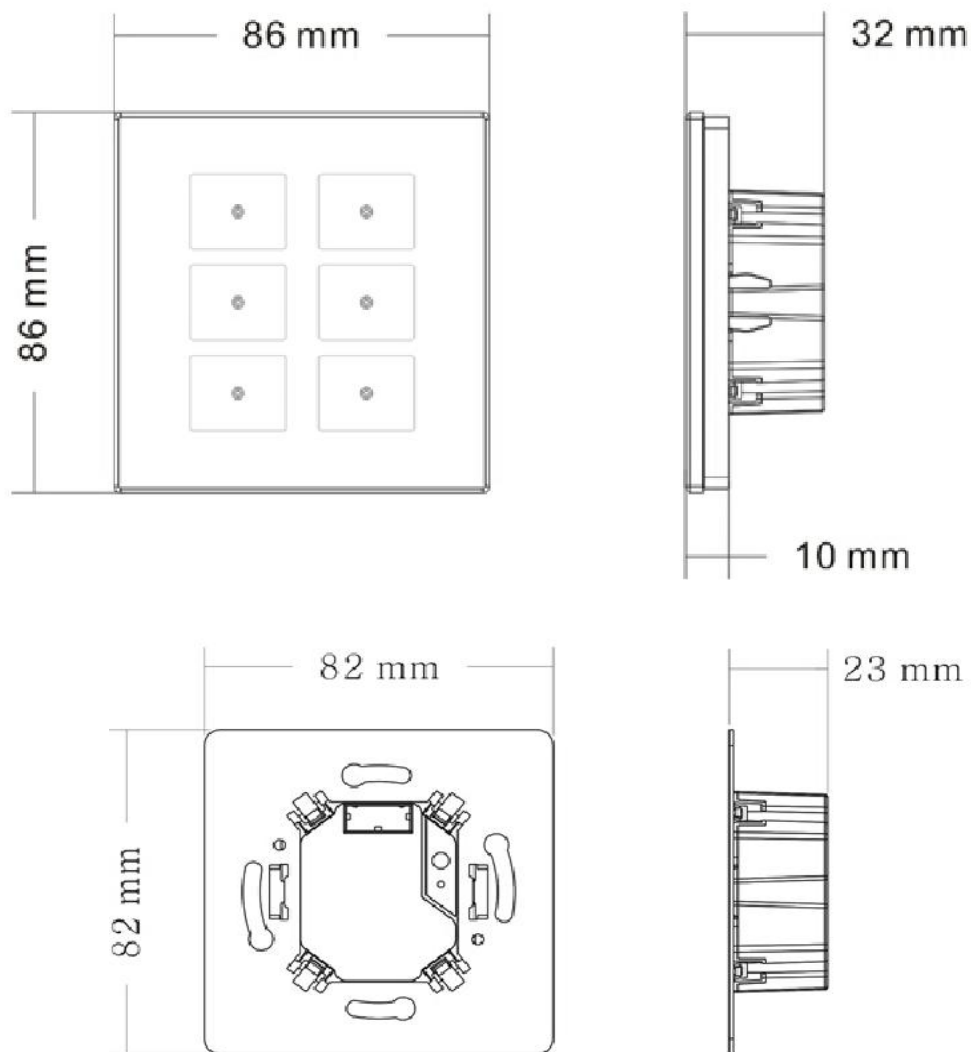


CHTB-06/01.2.10 (11)

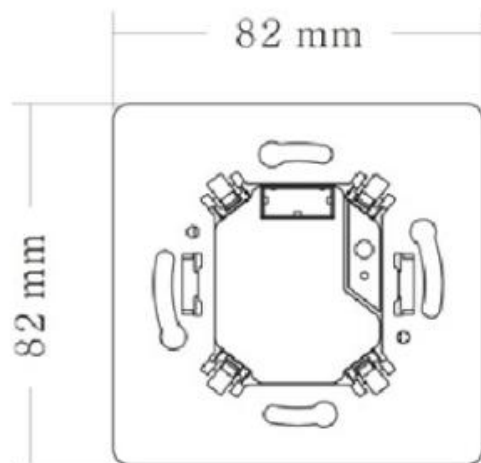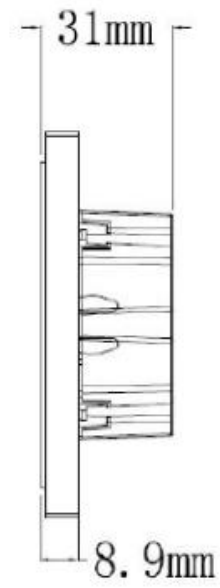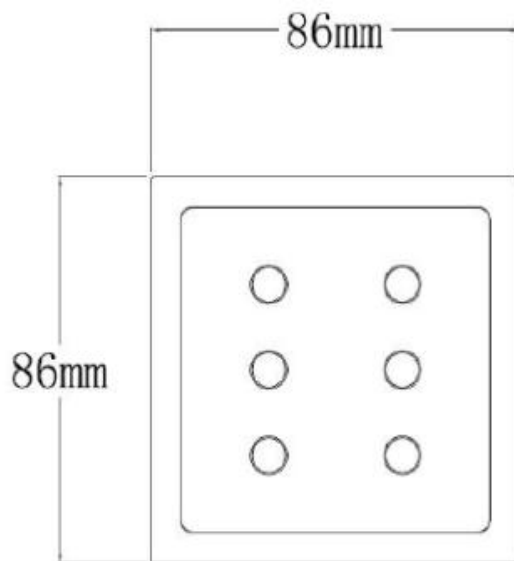

CHTB-06/01.2.21 (22/24)

### 3.2 Structure

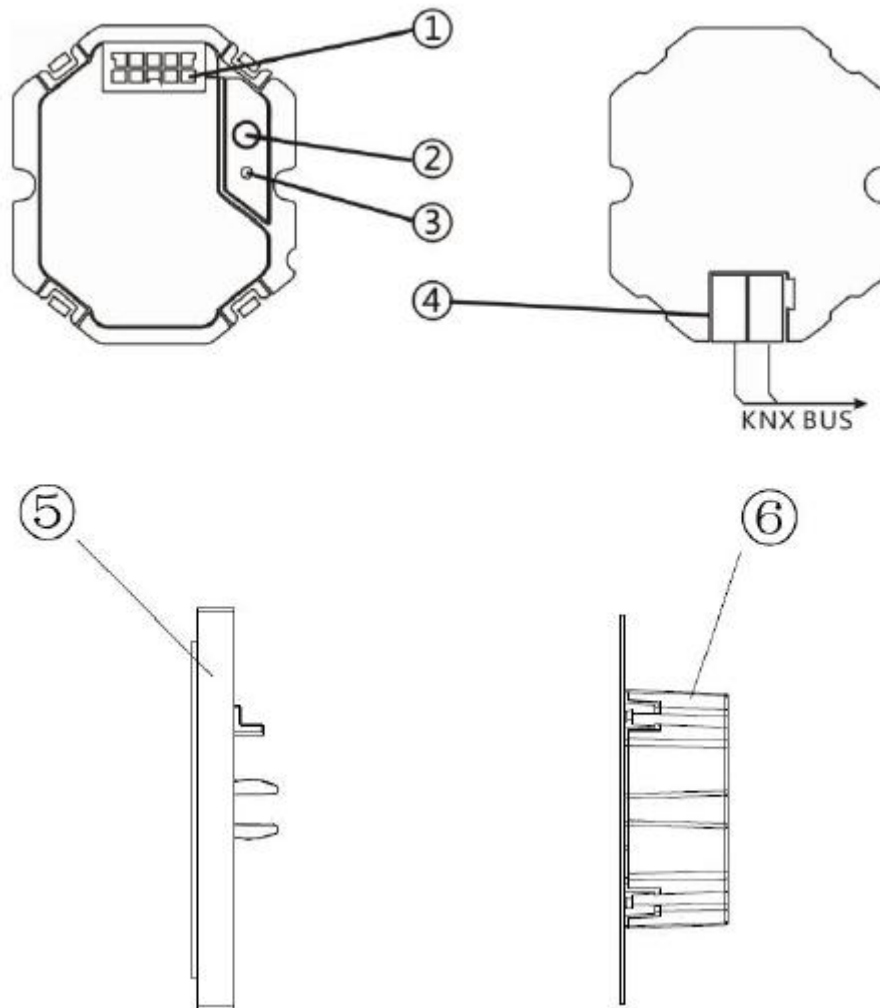

- ① 10-pin connector, to connect application module and the coupler
- ② Programming button KNX bus cable
- ③ Red LED indicates assignment of the physical address, Green LED indicates the device running normally (OK)
- ④ KNX bus connection terminal
- ⑤ Application module
- ⑥ Coupler module



## Chapter 4 Project design and programming

### 4.1 Overview of the functions

Application program	Max. number of communication objects	Max. number of group addresses	Max. number of associations
<b>6 Button Touch panel</b>	<b>24</b>	<b>50</b>	<b>50</b>

The following applications can be set separately for each button of the touch panel:

#### Switch

The application can be used for switching the lighting, such as relay, dimmer, etc.

#### Switch / Dimming

The application can be used for switching/dimming the lighting and is distinguished between long and short operation. The manner of dimming can be selected between start-stop dimming and step-wise dimming.

#### Blind and Shutter

The application can make the Shutter or Roller blind movement or lamella adjustment, and there is distinguish between long and short operation, a short operation will execute movement and a long operation will execute adjustment/stop.

#### Value sender

The application can be used for sending the different values or data types.

#### Light scene control with storage function

With the application, a short operation will recall a scene and a long operation will storage the current scene.

#### LED function

LED can be used for status display or the function display. The LED can light up in two colors.

## Chapter 5 Parameter setting description in the ETS

### 5.1 Parameter window “General”

Parameter window “General” can be shown in fig. 5.1. There used to set the working mode for each button, the left and right buttons are used in association or independently.

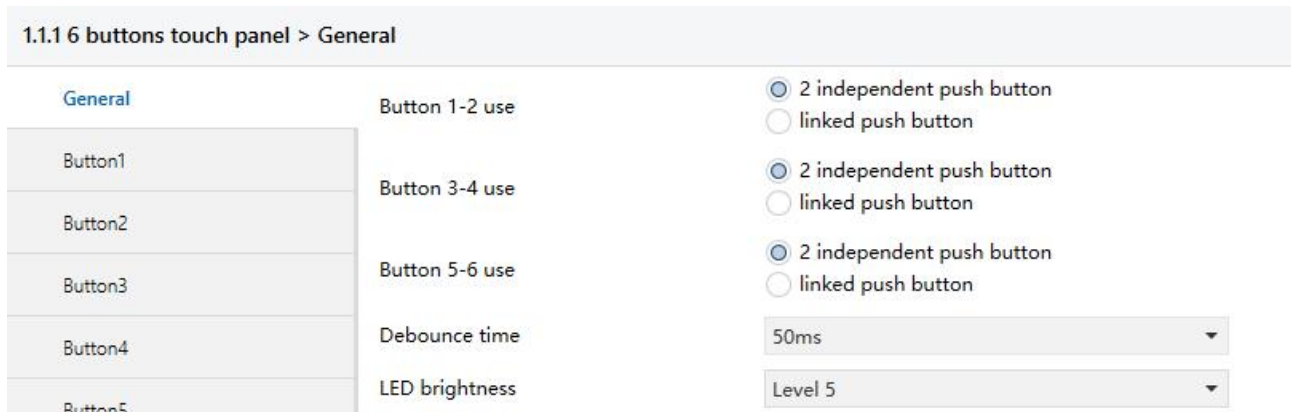


Fig.5.1 Parameter window “General”

#### Parameter “Button 1-2/3-4 use”

This parameter is used to set the working mode for each button. Options:

**2 independent push buttons**

**Linked push button**

If selecting “2 independent push buttons”, the left and right buttons of the panel are used independently.

If selecting “linked push button”, the left and right buttons of the panel are used in association.

The following sections details parameters and communication objects of each application in the two working modes, using one push button or left/right buttons as an example.

**Note: after bus power reset / programming download, the value of all communication objects defaults to 0.**

#### Parameter “Debounce time”

It can set the vibration time to prevent unwanted multiple operation by bouncing of contacts in vibration time, which means the effective time of the contact operation. Options:

**10ms/.../150ms**

## Parameter "LED brightness"

It can set the LED brightness of buttons. Options:

**Level 1/.../Level 5**

**Note:** This parameter applies to the slim 6 button touch panel.

## 5.2 Independent working mode

In each case, the applications make a separate set of parameters and communication objects available for the left and right buttons.

### 5.2.1 "Switching" function

Parameter window "Switching" can be shown in fig. 5.2. With the application, a switching telegram is sent out for an operation or upon release of the button.

1.1.1 6 buttons touch panel > Button1		
General	Choice of function	Switching
Button1	Reaction on rising edge	Alternating on/off
Button2	Reaction on falling edge	no reaction
Button3		
Button4		
Button5		
Button6		
LED function		

Fig.5.2 Parameter window "Switching"

## Parameter "Reaction on rising edge" / "Reaction on falling edge"

Via the parameters you can set which 1-bit value is sent out for every operation on rising edge and falling edge. This can be an ON telegram, an OFF telegram or a toggle telegram. Alternatively, no telegram can be sent out for an operation using the "No reaction" setting. Options:

**No reaction**

**On**

**Off**

**Alternating on/off**

“Alternating on/off” means that switching is always between ON and OFF. For example, if an ON telegram was last sent out, then a renewed operation of the button will trigger an OFF telegram. When the button is operated again, an ON telegram is sent out, etc. The button thus always remembers the last state and then switches over to the other value.

**Communication object “switching”, 1bit**

According to the parameter setting, the object is used to send out an ON telegram or an OFF telegram, or a toggle telegram via rising edge or falling edge of the button.

**5.2.2 “Dimming” function**

Parameter window “Dimming” can be shown in fig. 5.3. With the application, a push button has two communication objects for switching and for dimming. A distinction is made between short operation and long operation. A short operation will execute switching; a long operation will execute dimming.

A “switching” switching telegram is sent out on the 1-bit communication object. A “relative dimming” dimming telegram is sent out on the 4-bit communication object.

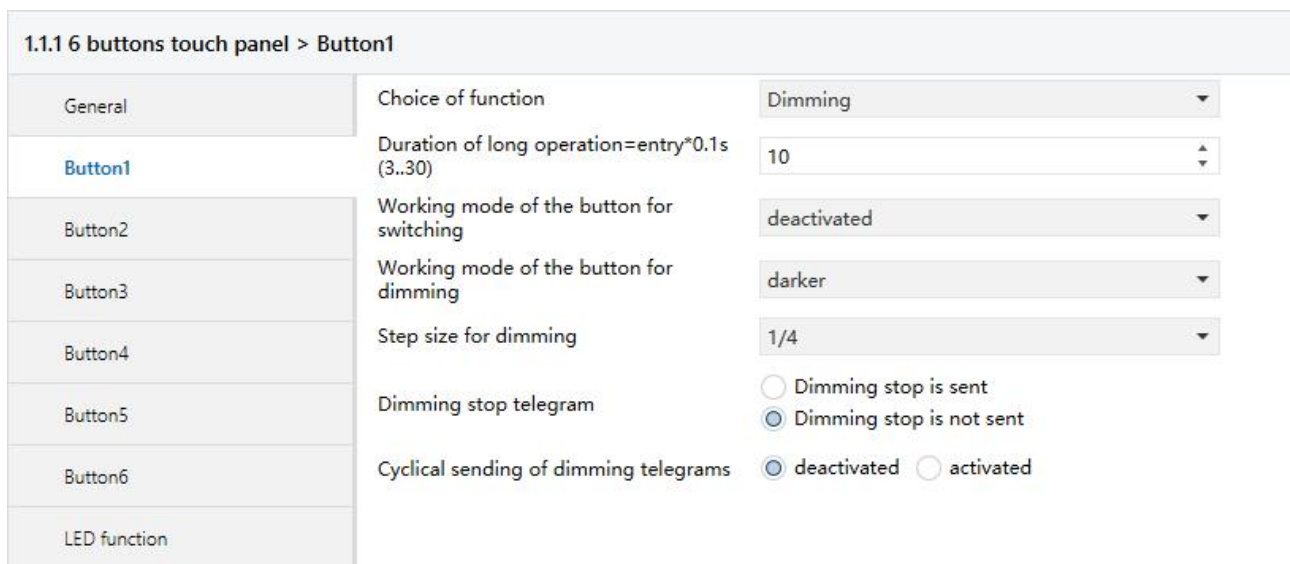


Fig.5.3 Parameter window “Dimming”

Parameter “duration of long operation=entry×0.1s” (3...30)

The parameter is used to define the time which a long operation is recognized. Options: **3~30**

**Parameter "working mode of the push button for switching"**

This parameter is used to determine whether a short operation sends out an ON or an OFF telegram via a 1-bit communication object. Alternatively, for the selection "alternating on/off", you can switch between switching on and switching off for every short operation, i.e. after a switch-on telegram has been sent out (or received), a switch-off telegram will be sent out for a renewed operation. After it is operated again, a switching-on telegram is sent out. Options:

**Deactivated**

**Off**

**On**

**Alternating on/off**

**Parameter "working mode of the push button for dimming"**

This parameter is used to determine whether a long operation sends out a dim brighter or a dim darker telegram via a 4-bit communication object. Alternatively, for the selection "alternating brighter/darker", you can switch between dimming up and dimming darker for every long operation, i.e. after a dim brighter telegram has been sent out, a dim darker telegram will be sent out for a renewed operation. After it is operated again, a dim brighter telegram is sent out. Options:

**Darker**

**Bright**

**Alternating brighter/ darker**

**Parameter "step size for dimming"**

The parameter is used to specify by how much brighter or darker dimming should occur. The sent out value always relates to the current brightness value. For example, a dimming actuator is currently dimmed to a brightness value of 70%. By operation of the button, a dimming command "dim by 25% (1/4 brighter)" is sent out. The dimming actuator will adjust its brightness value to 95% immediately after receiving the dimming command. Options: **1/1, 1/2, 1/4, ..., 1/32, 1/64**

**Parameter "dimming stop telegram"**

The parameter is used to determine whether the release of the button will trigger the "dimming stop" command or not. Options:

**Dimming stop is send**

**Dimming stop is not send**

With the “dimming stop is send” option, when the button is released, the telegram with the “dimming stop” information is sent out on the 4-bit communication object “relative dimming”.

#### Parameter “cyclical sending of dimming telegrams”

The parameter is used to determine the telegram with the “brighter” or “darker” information whether is sent out cyclically by a durative long operation. Options:

**Deactivated**

**Activated**

With the “deactivated” option, when triggered a durative long operation, only one telegram with the “brighter” or “darker” information is sent out on the 4-bit communication object “relative dimming”.

With the “activated” option, when triggered a durative long operation, the telegram with the “brighter” or “darker” information is sent out cyclically on the 4-bit communication object “relative dimming”.

#### Parameter “Duration of the telegram repetitions=entry>0.1 s (3..30) ”

The parameter is only visible if the “cyclical sending of dimming telegrams” parameter is set to “activated”. It is used to set the interval time between two telegrams that are sent cyclically, options:

**3~30**

#### Communication object “switching”, 1bit

According to the parameter setting, the object is used to send out an ON telegram or an OFF telegram, or a toggle telegram via a short operation of the button.

#### Communication object “relative dimming”, 4bit

According to the parameter setting, the object is used to send out a dim brighter or a dim darker telegram via a long operation of the button. When the button is released, it is possible that a dim stop telegram is sent out via the object.

### 5.2.3 “Blind” function

Parameter window “blind” can be shown in fig. 5.4. With the application, a push button has two functions to be realized: shutter and roller blind. In the case of shutter, an operation of the button sends out a blind movement command or a slats adjustment command. A short operation always triggers a travel command and a long operation always triggers a slats adjustment command. You can specify

whether the shutter control occurs via two 1-bit or two 1-byte communication objects “travel” and “adjust”. If the communication object “adjust” is selected to 1-bit, the slats adjustment command can be sent out cyclically. In the case of roller blind, a short operation triggers a travel command and a long operation trigger a stop command, the blind control occurs via two 1-bit communication objects “travel” and “stop”.

1.1.1 6 buttons touch panel > Button1

General	Choice of function	Blind
Button1	Duration of long operation=entry*0.1s (3..30)	10
Button2	Function switchover blinds/roller shutters	<input checked="" type="radio"/> Shutter <input type="radio"/> Roller blind
Button3	Object type	<input checked="" type="radio"/> 1 bit <input type="radio"/> 1 byte 0..100%
Button4	Cycle time of the telegram repetition=entry*0.1s(3..30)	10

Fig.5.4 Parameter window “Blind”

**Parameter “duration of long operation=entry×0.1s (3...30)”**

The parameter is used to define the time which a long operation is recognized. Options: **3~30**

**Parameter “cycle time of the telegram repetition= entry×0.1s (3...30)”**

The parameter is only visible if the “object type” parameter is set to “1 bit”. It is used to set the interval time between two telegrams that are sent cyclically for a durative long operation, options: **3~30**

**Parameter “object type”**

This parameter is only visible if the “function switchover blinds/roller shutter” parameter is set to “shutter”. It is used to define the type of the communication objects “travel” and “adjust”. Options:

**1bit**

**1byte**

**Parameter “Function switchover roller blind/ shutter”**

The parameter is used to determine whether a roller blind or shutter is to be driven by an operation. With the “roller blind” setting, the value for the slats adjustment does not apply. Options:

**Shutter**

**Roller blind**

**Parameter “value for position down (%)”/“value for position up (%)”**

This parameter can only be set if “1 byte” has been set as object type, which can be used to set the position (percent values) that a connected blind shall be lowered or raised to. Options: **0~100**, the value 0% means travel up completely, the value 100% means travel down completely.

Parameter "value for stats position down (%)" / "value for stats position up (%)"

This parameter can only be set if "1 byte" has been set as object type, which can be used to set the position (percent values) that a connected blind slat shall be opened or closed to. Options: **0~100**, the value 0% means slat opened completely, the value 100% means closed completely.

#### **Communication object "travel", 1bit (shutter)**

This object is visible if the parameter "object type" is set to "1bit", it is used to send out a shutter movement command (UP or DOWN) on the bus via a short operation of the button. Telegram value:

"0" UP

"1" DOWN

#### **Communication object "adjust", 1bit (shutter)**

This object is visible if the parameter "object type" is set to "1bit", it is used to send out a lamella adjustment command (UP or DOWN) on the bus via a long operation of the button. Telegram value:

"0" lamella UP

"1" lamella DOWN

#### **Communication object "travel", 1byte (shutter)**

This object is visible if the parameter "object type" is set to "1byte", it is used to send out a shutter movement command (UP or DOWN, percent values) on the bus via a short operation of the button.

Telegram value: 0~100, 0 travel up completely, 100 travel down completely.

#### **Communication object "adjust", 1byte (shutter)**

This object is visible if the parameter "object type" is set to "1byte", it is used to send out a slats adjustment command (UP or DOWN, percent values) on the bus via a long operation of the button.

Telegram value: 0~100, 0 slat opened completely, 100 slat closed completely.

#### **Communication object "travel", 1bit (roller blind)**

This object is visible if the parameter "function switchover roller blind/shutter" is set to "roller blind", it is used to send out a roller blind movement command (UP or DOWN) on the bus via a short operation of the button. Telegram value:

"0" UP

"1" DOWN



### Communication object “stop”, 1bit (roller blind)

This object is visible if the parameter “function switchover roller blind/shutter” is set to “roller blind”, which is used to send out a roller blind stop telegram on the bus via a long operation of the button.

Telegram value: “0” or “1” stop

#### 5.2.4 “Value sender” function

Parameter window “value sender” can be shown in fig. 5.5. With the application, two telegrams with the predefined values from two different communication objects can be sent out on rising edge or falling edge of the button.

1.1.1 6 buttons touch panel > Button1		
General	Choice of function	Value sender
Button1	Object type for rising edge	1 bit value[0..1]
Button2	Output value(1bit)	<input checked="" type="radio"/> OFF <input type="radio"/> ON
Button3	Object type for falling edge	1 bit value[0..1]
Button4	Output value(1bit)	<input checked="" type="radio"/> OFF <input type="radio"/> ON

Fig.5.5 Parameter window “value sender”

#### Parameter “object type for rising edge”/“object type for falling edge”

The parameters are used to define the data types that are sent when the button is actuated on rising edge and falling edge. The data types specified the bit size of the communication objects and the value range. Options:

**No reaction**

**1 bit value [0...1]**

**2 bit value [0...3]**

**4 bit value [0...15]**

**1 byte value [-128...127]**

**1 byte value [0...255]**

**2 byte value [-32768...32767]**

**2 byte value [0...65535]**

**2 byte value [Float]**

**3 byte value [time of day]**

**4 Byte value [-2147483648...2147483647]**

**4 byte value [0...4294967295]**

No reaction: no any value is sent.

**Parameter "output value (1bit ... 4byte)"**

The parameters are used to specify the value which is sent out for rising edge or falling edge of the button. The values range is dependent on the selected data types.

**Communication object "switching (rising edge)", 1bit//3bit/4bit/1byte/2byte/3byte/4byte**

The type of the object is set in the parameter "object type for rising edge", the object is used to send out a telegram with the predefined value for rising edge of the button.

**Communication object "switching (falling edge) ", 1bit//3bit/4bit/1byte/2byte/3byte/4byte**

The type of the object is set in the parameter "object type for falling edge", the object is used to send out a telegram with the predefined value for falling edge of the button.

**5.2.5 "Scene" function**

Parameter window "Scene" can be shown in fig. 5.6. With the application, a predefined light scene number can be recalled for an operation of the button. The user has the option to trigger a light scene storage command via a long operation.

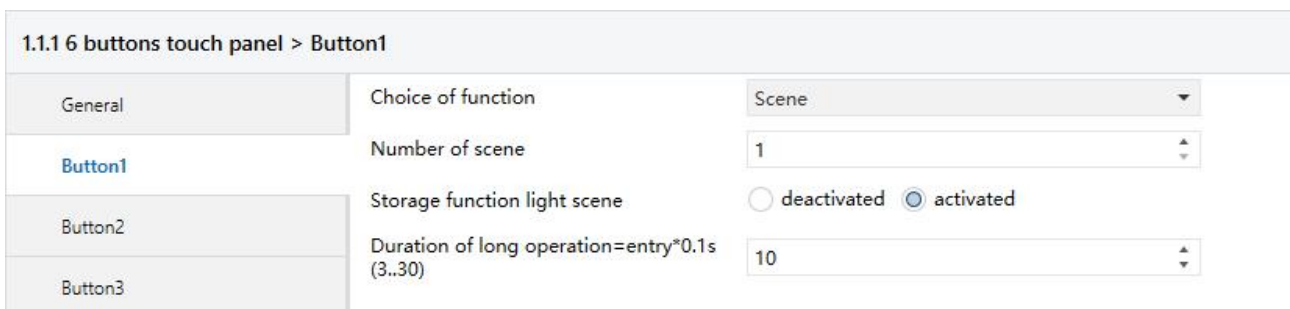


Fig.5.6 Parameter window "Scene"

**Parameter "number of scene (1... 64)"**

The parameter is used to set an arbitrary light scene number from 1 to 64 which can be sent out via the 1-byte communication object "Button x, scene"(x=1/2.../6) for an operation of the button.

### Parameter "storage function light scenes"

It is used to set whether the scene storage function is enabled, options:

**Deactivated**

**Activated**

With the setting "activated", the user has the option of sending out a scene storage command via a long operation. The same 1-byte communication object that is used for this can also recall the scene number via a short operation.

### Parameter "duration of long operation= entry\*0.1s" (3...30) "

The parameter is only visible if the "storage function light scenes" parameter is set to "activated". It is used to define the time which a long operation is recognized. Options: **3~30**

### Communication object "Button 1/2.../6, scene", 1byte

The object is used to send out a scene number and the information as to whether a scene should be recalled or the current scene should be stored. The number of scene is set in the parameter "Number of scene".

Telegram code 8 bit:

**FXNNNNNN**

**F: 0—Scene is recalled**

**1—Scene is stored**

**X: Not used**

**NNNNNN: Number of the scene (0...63)**

1-64 in the parameter setup corresponds to the scene number 0-63 sent by the communication object "Number of scene". For example, scene 1 in the parameter setup has the same output result as scene 0 in the communication object "Number of scene".

## 5.3 Linked working mode

In the linked working mode, the applications differentiate between operating on the left button and the right button.

### 5.3.1 “Switching” function

Parameter window “switching” can be shown in fig. 5.7. With the application, an operation of the left or right button sends out a switching telegram.

1.1.1 6 buttons touch panel > Button pair1		
General	Choice of function	Switching
Button pair1	Working mode of left/right push buttons	On/Off
Button pair2		

Fig.5.7 Parameter window “Switching”

#### Parameter “working model of left/right push buttons”

The parameter is used to define whether switching on or switching off occurs via the left or right button. Options:

**On/Off**

**Off/On**

**Alternating On/Off**

If the option “alternating on/off” is selected, switching is always between ON and OFF. That means, for example, if an ON telegram was last sent out, then a renewed operation of the button will trigger an OFF telegram. When the button is operated again, an ON telegram is sent out, etc. The button thus always remembers the last state and then switches over to the other value.

#### Communication object “switching”, 1bit

According to the parameter setting, the object is used to send out an ON telegram or an OFF telegram .

### 5.3.2 “Dimming” function

Parameter window “Dimming” can be shown in fig. 5.8. With the “dimming” application, an operation of the left or right button sends out a switching telegram or a dimming telegram. In the case of step-wise dimming, a distinction is made between short and long operation, you can specify whether a short or long operation will execute switching or dimming. A “switching” switching telegram is sent out on the 1-bit communication object. A “relative dimming” dimming telegram is sent out on the 4-bit communication object.

1.1.1 6 buttons touch panel > Button pair1

General	Choice of function	Dimming
Button pair1	Duration of long operation=entry*0.1s (3..30)	10
Button pair2	Manner of dimming	<input type="radio"/> Start-Stop dimming <input checked="" type="radio"/> Step-wise dimming
Button pair3	Step size for dimming	1/4
LED function	Dimming functionality	<input checked="" type="radio"/> Short operation dimming, long operation s... <input type="radio"/> Short operation switching, long operation...
	Working mode of left/right push buttons for switch	On/Off
	Working mode of left/right push buttons for dimming	<input checked="" type="radio"/> Darker/Brighter <input type="radio"/> Brighter/Darker

Fig.5.8 Parameter window “Dimming”

Parameter “duration of long operation=entry\*0.1s” (3...30)

The parameter is used to define the time which a long operation is recognized. Options: **3~30**

Parameter “manner of dimming”

You can select between the two dimming manner “start-stop dimming” and “step-wise dimming” via this parameter. Options:

**Start-stop dimming**

**Step-wise dimming**

With the “start-stop dimming” option, it means that exactly two 4-bit telegrams for dimming are always sent out. For triggering of a dimming command, a telegram with the information “dim by 100% brighter” or “dim by 100% darker” is sent out. When the button is released, the second telegram is sent out with the “dimming stop” information.

With the “step-wise dimming” option, the dimming manner is the step-wise dimming. You can set a telegram with the “brighter” or “darker” information whether is sent out cyclically by a long operation. And when the button is released, you can also set the telegram with the “dimming stop” information whether

is sent out.

#### Parameter "step size for dimming"

The parameter is only visible if the "manner of dimming" parameter is set to "step-wise dimming". Here you can specify by how much brighter or darker dimming should occur. The sent out value always relates to the current brightness value. For example, a dimming actuator is currently dimmed to a brightness value of 70%. By operation of the button, a dimming command "dim by 25% (1/4) brighter" is sent out. The dimming actuator will adjust its brightness value to 95% immediately after receiving the dimming command. Options: **1/1, 1/2, 1/4, ..., 1/32, 1/64**

#### Parameter "dimming functionality"

The parameter is only visible if the "manner of dimming" parameter is set to "step-wise dimming". It is used to define the functionality of the dimming. You can set whether a switching telegram will be sent out for a short operation of the button and a dimming telegram will be sent out for a long operation or whether a long operation will cause a switching telegram to be sent out and a short operation will cause a dimming telegram to be sent out. Options:

**Short operation dimming, long operation switching**

**Short operation switching, long operation dimming**

#### Parameter "working mode of left/right push buttons for switching"

The parameter is used to define whether switching on or switching off or a toggle telegram occurs via the left or right button. Options:

**On/Off**

**Off/On**

**Alternating On/Off**

If the option alternating on/off is selected, you can switch between switching on and switching off for every operation that triggers a switching telegram. For example, if an ON telegram was last sent out, then a renewed operation of the button will trigger an OFF telegram. When the button is operated again, an ON telegram is sent out, etc. The button thus always remembers the last state and then switches over to the other value.

#### Parameter "working mode of left/right push buttons for dimming"

The parameter is used to define whether a dim brighter or a dim darker telegram occurs via the left or right button. A dimming telegram that is triggered will be sent out on the 4-bit communication object

“relative dimming”. Options:

**Darker/ Bright**

**Bright/ Darker**

#### Parameter “dimming stop telegram”

The parameter is only visible if the “dimming functionality” parameter is set to “short operation switching, long operation dimming”. It is used to determine whether the release of the button will trigger the “dimming stop” command or not. Options:

**Dimming stop is send**

**Dimming stop is not send**

With the “dimming stop is send” option, when the button is released, the telegram with the “dimming stop” information is sent out on the 4-bit communication object “relative dimming”.

#### Parameter “cyclical sending of dimming telegrams”

The parameter is only visible if the “dimming functionality” parameter is set to “short operation switching, long operation dimming”. It is used to determine the telegram with the “brighter” or “darker” information whether is sent out cyclically by a durative long operation. Options:

**Deactivated**

**Activated**

With the “activated” option, when triggered a durative long operation, the telegram with the “brighter” or “darker” information is sent out cyclically on the 4-bit communication object “relative dimming”.

#### Parameter “Duration of the telegram repetitions=entry×0.1 s (3...30) ”

The parameter is only visible if the “cyclical sending of dimming telegrams” parameter is set to “activated”. It is used to set the interval time between two telegrams that are sent cyclically, options:

**3~30**

#### Communication object “switching”, 1bit

According to the parameter setting, the object is used to send out an ON telegram or an OFF telegram.

#### Communication object “relative dimming”, 4bit

According to the parameter setting, the object is used to send out a dim brighter or a dim darker telegram, or a dim stop telegram.

### 5.3.3 “Blind” function

Parameter window “blind” can be shown in fig. 5.9. With the “blind” application, an operation of the left or right button sends out a blind movement command or a slats adjustment command. A short operation always triggers a travel command and a long operation always triggers a slats adjustment command. You can specify whether the blind control occurs via two 1-bit or two 1-byte communication objects “travel” and “adjust”.

General	Choice of function	Blind
Button pair1	Duration of long operation=entry*0.1s (3..30)	10
Button pair2	Object type	<input type="radio"/> 1 bit <input checked="" type="radio"/> 1 byte 0..100%
Button pair3	Working mode of left/right push buttons	<input checked="" type="radio"/> Up/Down <input type="radio"/> Down/Up
LED function	Value for position down(%)	100
	Value for position up(%)	0
	Value for slats position down(%)	100
	Value for slats position up(%)	0

Fig.5.9 Parameter window “Blind”

#### Parameter “duration of long operation=entry×0.1s (3 ..30)”

The parameter is used to define the time which a long operation is recognized. Options: **3~30**

#### Parameter “object type”

This parameter is used to define the type of the communication objects “travel” and “adjust”.

Options:

**1bit**

**1byte**

#### Parameter “working mode of left/right push buttons”

The parameter is used to determine whether operation of the left or right button will send out commands for movement and adjustment. For a short operation of the button, a moving up or down telegram is sent out on a 1-bit communication object. For a long operation, a slat adjustment up or down telegram is sent out on a 1-bit communication object. Options:

**Down/ Up**

**Up/ Down**



**Parameter "value for position down (%)" / "value for position up (%)"**

This parameter can only be set if "1 byte" has been set as object type, which can be used to set the position (percent values) that a connected blind shall be lowered or raised to. Options: **0~100**, the value 0% means travel up completely, the value 100% means travel down completely.

**Parameter "value for slats position down (%)" / "value for slats position up (%)"**

This parameter can only be set if "1 byte" has been set as object type, which can be used to set the position (percent values) that a connected blind slat shall be opened or closed to. Options: **0~100**, the value 0% means slat opened completely, the value 100% means closed completely.

**Communication object "travel", 1bit**

This object is visible if the parameter "object type" is set to "1bit", it is used to send out a shutter movement command (UP or DOWN) on the bus via a short operation of the button. Telegram value:

"0" UP

"1" DOWN

**Communication object "adjust", 1bit**

This object is visible if the parameter "object type" is set to "1bit", it is used to send out a lamella adjustment command (UP or DOWN) on the bus via a long operation of the button. Telegram value:

"0" lamella UP

"1" lamella DOWN

**Communication object "position", 1byte**

This object is visible if the parameter "object type" is set to "1byte", it is used to send out a shutter movement command (UP or DOWN, percent values) on the bus via a short operation.

Telegram value: 0~100, 0 travel up completely, 100 travel down completely.

**Communication object "Slats position", 1byte**

This object is visible if the parameter "object type" is set to "1byte", it is used to send out a slats adjustment command (UP or DOWN, percent values) on the bus via a long operation.

Telegram value: 0~100, 0 slats opened completely, 100 slats closed completely.

### 5.3.4 “Value sender” function

Parameter window “value sender” can be shown in fig. 5.10. With the application, a telegram with the predefined value is sent out for an operation of the left or right button.

1.1.1 6 buttons touch panel > Button pair1

General	Choice of function	Value sender
Button pair1	Working mode of left/right push buttons	Value1/Value2
Button pair2	Object type	1 bit value[0..1]
Button pair3	Value 1(1bit)	<input checked="" type="radio"/> OFF <input type="radio"/> ON
LED function	Value 2(1bit)	<input checked="" type="radio"/> OFF <input type="radio"/> ON

Fig.5.10 Parameter window “value sender”

#### Parameter “working mode of left/right push buttons”

This parameter is used to determine whether via operating the left or right button to send out the “value 1” or “value 2”. Options:

**Value 1/Value 2**

**Value 2/Value 1**

**Alternating Value 1/Value 2**

If the option “alternating value1/value2” is selected, switching is always between value1 and value2. That means, for example, if value1 was last sent out, then a renewed operation of the button will trigger value2. When the button is operated again, value1 is sent out, etc. The button thus always remembers the last state and then switches over to the other value.

#### Parameter “object type”

The parameter is used to define the data type that is sent when the button is actuated for every operation. The data type specified the bit size of the communication objects and the value range.

Options:

**1 bit value [0...1]**

**2 bit value [0...3]**

**4 bit value [0...15]**

**1 byte value [-128...127]**

**1 byte value [0...255]**

**2 byte value [-32768...32767]**

**2 byte value [0...65535]**

**2 byte value [Float]**

**3 byte value [time of day]**

**4 byte value [-2147483648...2147483647]**

**4 byte value [0...4294967295]**

**Parameter "value1"/"value2"**

The parameters are used to specify value1 and value2 which are sent out. The values range is dependent on the selected data type.

**Communication object "Button pair 1/2/3, value sender", 1bit//3bit/4bit/1byte/2byte/3byte/4byte**

The type of the object is set in the parameter "object type", the object is used to send out a telegram with the predefined value. The predefined value and data types can be freely selected in the parameters.

**5.3.5 "Scene" function**

Parameter window "Scene" can be shown in fig. 5.11. With the application, a predefined light scene number can be recalled for an operation of the left or right button. The user has the option to trigger a light scene storage command via a long operation.

1.1.1 6 buttons touch panel > Button pair1		
General	Choice of function	Scene ▼
Button pair1	Working mode of left/right push buttons	Value1/Value2 ▼
Button pair2	Value1: Number of scene	1 ▲▼
Button pair3	Value2: Number of scene	1 ▲▼
LED function	Storage function scene	<input type="radio"/> deactivated <input checked="" type="radio"/> activated
	Duration of long operation=entry*0.1s (3..30)	10 ▲▼

Fig.5.11 Parameter window "Scene"

**Parameter "working mode of left/right push buttons"**

This parameter is used to determine whether via operating the left or right button to send out the "value 1" or "value 2". Options:

**Value 1/Value 2**

**Value 2/Value 1**

**Alternating Value 1/Value 2**

If the option "alternating value1/value2" is selected, value1 and value2 is always sent alternately. That means, for example, if value1 was last sent out, then a renewed operation of the button will trigger value2. When the button is operated again, value1 is sent out, etc. The button thus always remembers the last state and then switches over to the other value.

**Parameter "value 1/value 2: number of scene (1...64)"**

The parameter is used to set an arbitrary light scene number from 1 to 64 for value1/value2. Options: **1-64.**

Scene No. 1...64 corresponding to telegram value 0...63 can be set.

**Parameter "storage function scenes"**

It is used to set whether the scene storage function is enabled, options:

**Deactivated**

**Activated**

With the setting "activated", the user has the option of sending out a scene storage command via a long operation. The same 1-byte communication object that is used for this can also recall the scene number via a short operation.

**Parameter "duration of long operation= entry×0.1s" (3...30) "**

The parameter is only visible if the "storage function light scenes" parameter is set to "activated". It is used to define the time which a long operation is recognized. Options: **3~30**

**Communication object "Button pair 1/2/3,scene", 1byte**

The object is used to send out a scene number and the information as to whether a scene should be recalled or the current scene should be stored. The number of scene is set in the parameter "Number of scene".

Telegram code 8 bit:

**FXNNNNNN**

**F: 0—Scene is recalled**

**1—Scene is stored**

**X: Not used**

**NNNNNN: Number of the scene (0...63)**

1-64 in the parameter setup corresponds to the scene number 0-63 sent by the communication object “Number of scene”. For example, scene 1 in the parameter setup has the same output result as scene 0 in the communication object “Number of scene”.

### 5.4 Parameter window “LED function”

Parameter window “LED function” can be shown in fig. 5.12. Each button has a LED, which can be used for status display or for the function display. The LED can light up in two colors. LED indication and the button operation are independent of each other. Their parameters and communication objects can be also set separately.

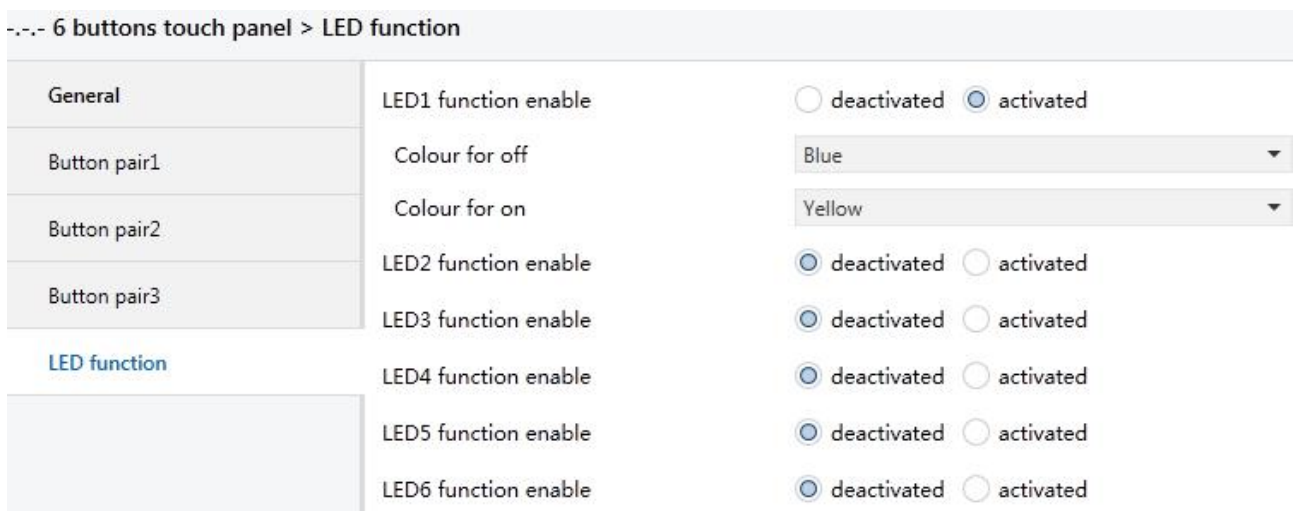


Fig.5.12 Parameter window “LED function”

#### Parameter “LED function enable”

It is used to set whether LED function is enabled, options:

**Deactivated**

**Activated**

---

---

If the option “activated” is selected, the object “Status” will be enabled.

Parameter “colour for on / off”

These parameters are used to set the colour that the LED takes on when the object “Status” received a telegram. Options:

**Off**

**Blue**

**Yellow**

**Communication object “Status”, 1bit**

If the “LED function enable” parameter is set to “Activated”, the object “status” is enabled. It is used to receive object value of 1bit.